



Deborah Benvenuti

V O Y A G E

DIGITAL PANELS ON POLYETHYLENE TEREPHTHALATE METALLIC NON WOVEN BASE

LAYING INSTRUCTIONS



ITALIAN LUXURY WALLPAPER

DIGITAL PANELS ON POLYETHYLENE TEREPHTHALATE METALLIC NON WOVEN BASE

Digital panels are extremely versatile products, suitable for covering ambiances offering a broader and more flexible concept of decorative solutions.

The golden shades and reflections of this support qualitatively enhance the printed subject, giving it a very bright and luminous appearance at the same time.

They are completely free of vinyl parts and therefore are extremely breathable.

The types of support on which they are proposed require **maximum attention** and **extreme care** during the installation. Given the delicacy in the cleaning phase, avoid rubbing and the use of detergent products.

LAYING INSTRUCTIONS

The components necessary for installation are:

Glue: recommended type of glue METYLAN - Henkel S.p.A. for non-woven product


Product: technical fabric with graphic print

The installation temperature must be between + 7 °C and + 35 °C.

For an optimal result, fully respect the application sequence and the recommended quantities.

IMPORTANT: any defects must be found after the application of the first two sheets and no later than. Complaints for larger quantities are not accepted. No other costs are accepted.

N.B.: we recommend that you rely on a professional for the installation of this product.

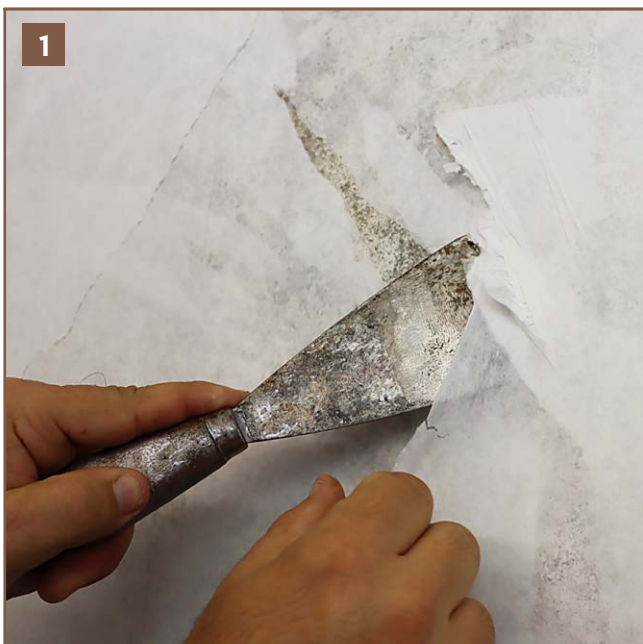

Prepare the surfaces, which must be smooth, dry and slightly absorbent.



Use a glue suitable for non-woven product (METY-LAN - Henkel S.p.A. recommended) by applying it both on the surface to be decorated and on the back of the first sheet.



Lay the wallpaper sheet on the wall, applying pressure appropriately with the help of a soft bristle brush. Make sure that no air bubbles form and that the panel adheres perfectly to the wall.



Trim the ends.



Lay the next sheet in relation to the image of the previous sheet following the same procedures indicated in point 3.



Remove the glue **very carefully** using a soft fiber cloth, trying not to spread it on the panel and avoiding rubbing.

KEY LEGEND



Spongeable



Very good light resistance



Adhesive to be applied to the support to be decorated



Adhesive to be applied to the wallcovering



Strippable