



DIGITAL PANELS IN VINYL WITH
NON-WOVEN BASE, IN LAMINATE WITH
NON-WOVEN BASE AND IN PURE NON-WOVEN

LAYING INSTRUCTIONS



DIGITAL PANELS IN VINYL WITH NON-WOVEN BASE, IN LAMINATE WITH NON-WOVEN BASE AND IN PURE NON-WOVEN

The digital panels in vinyl with non-woven base give a pleasant satin effect to the printed subject, enhancing its colors and design and creating a decidedly artistic final result.

Those printed on foil are extremely unique products. The brightness and iridescence of this support emphasize the reliefs of the texture creating exclusive shades, with mirror effects and unique reflections, and making the vividness of the colors to the maximum.

The pure non-woven panels are totally free of vinyl parts and therefore are extremely breathable, at the same time they are also more delicate as they are not washable. They have a very lively and brilliant color rendering.

All these types of support require **great attention** during installation and **extreme care** during cleaning, using only soft cloths soaked in water only and avoiding rubbing.
For pure non-woven panels, avoid using water.

LAYING INSTRUCTIONS

The components necessary for installation are:

Glue: recommended type of glue for non-woven product.

Product: technical fabric with graphic print


The installation temperature must be between + 7 °C and + 35 °C.

For an optimal result, fully respect the application sequence and the recommended quantities.

IMPORTANT: any defects must be found after the application of the first two sheets and no later than. Complaints for larger quantities are not accepted. No other costs are accepted.

N.B.: we recommend that you rely on a professional for the installation of this product.

1

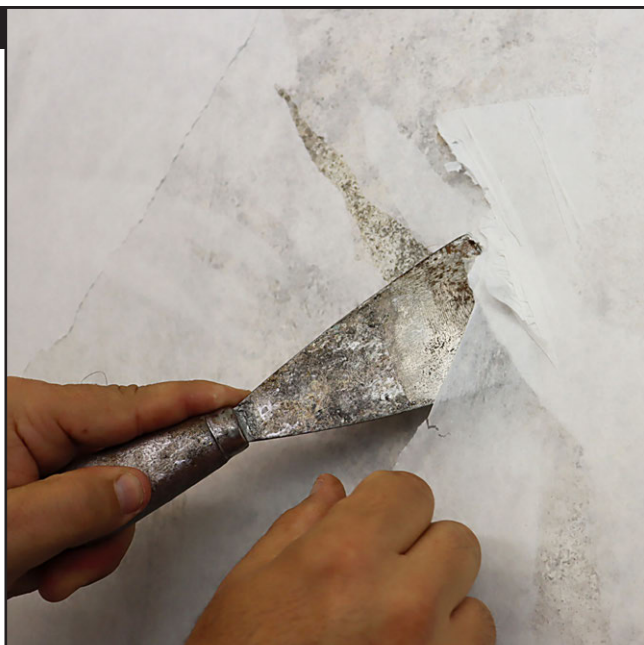


Prepare the surfaces, which must be smooth, dry and slightly absorbent.

2




Use a glue suitable for non-woven product by applying it both on the surface to be decorated and on the back of the first sheet.

3

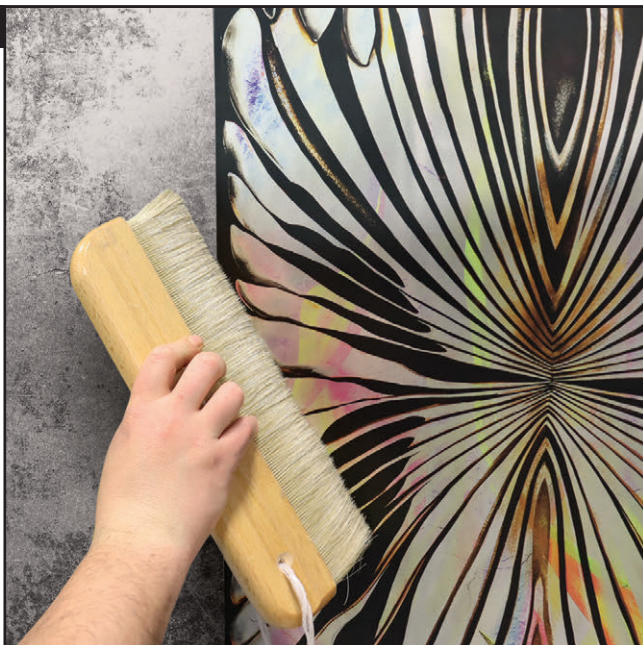

Lay the wallpaper sheet on the wall, applying pressure appropriately.
Make sure that no air bubbles form and that the panel adheres perfectly to the wall.

4

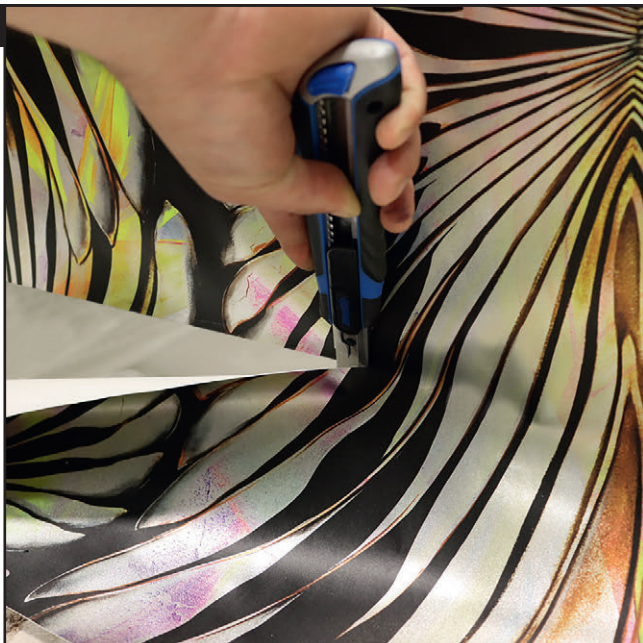


Trim the ends.

5



Lay the next sheet in relation to the image of the previous sheet following the same procedures indicated in point 3.

6

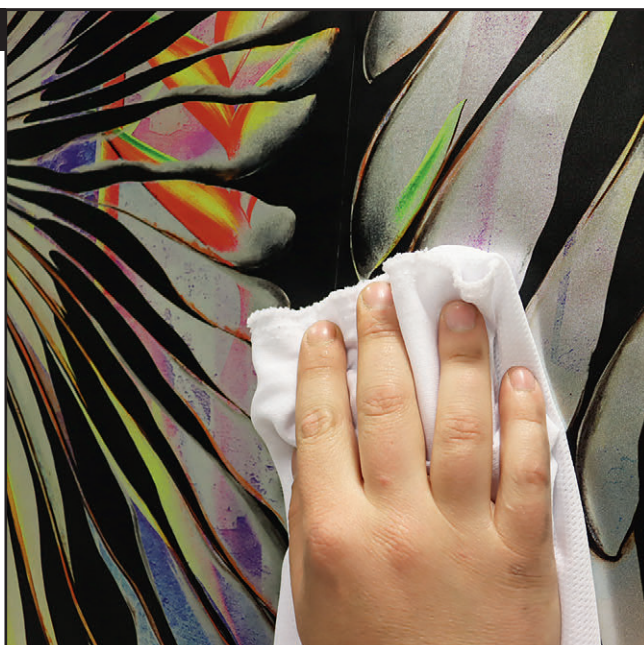

Remove the glue **very carefully** using a soft cloth moistened with water only, trying not to spread it on the panel and avoiding rubbing. For pure non-woven panels, avoid using water.

KEY LEGEND



Spongeable (not valid for pure non-woven panels)



Very good light resistance



Adhesive to be applied to the support to be decorated



Adhesive to be applied to the wallcovering



Strippable